


## Instructions for DC Sensor

### Instructions for DC Sensor


For products with DC PIR or motion sensor function, the induction module should be installed into the mounting hole on the cover.

Step 1: Remove the plug in the mounting hole with screwdriver.

Step 2: Insert the induction module into the mounting hole.

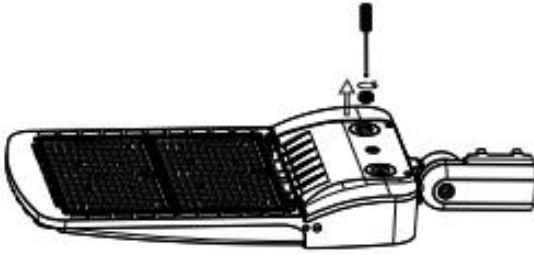

Step 1

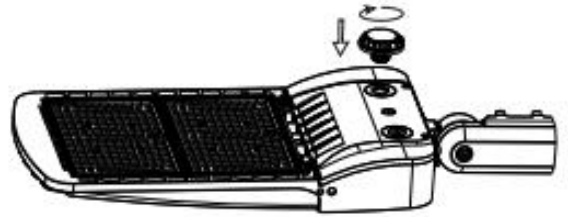

Step 2